



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz


FITTING INSTRUCTIONS FIT444

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


VW AMAROK 2010+

P/NBG516D

1. Open the Bonnet and fit the Bonnet Guard in place ensuring that it is centrally located. Note the holes in the Bonnet Guard lining up with the holes in the Bonnet.
2. Insert the plastic grommet through these holes in the underside of the Bonnet.
3. Firmly fasten using screws provided. As shown in diagram "A"

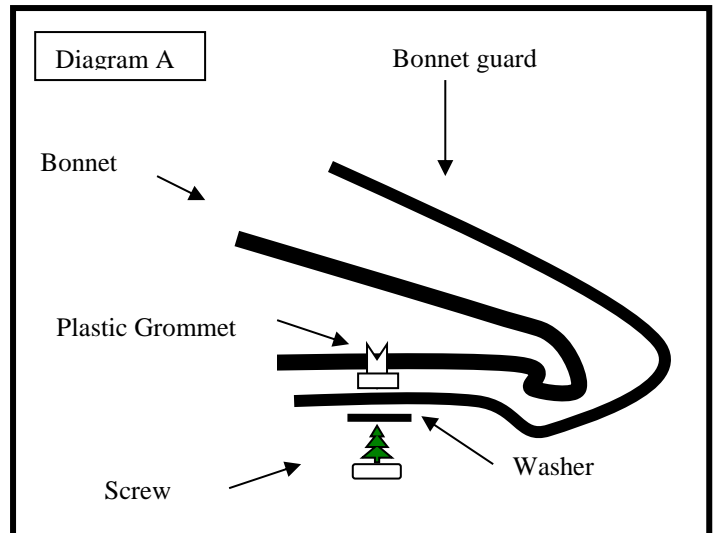

4. Apply the supplied anti-abrasive tape to the edge of the Bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. (cleanse the area with the supplied Alcohol wipes first)
5. Snap the plastic clips into hole positions on Bonnet Guard, over the anti-abrasive tape. As shown in diagram "B"

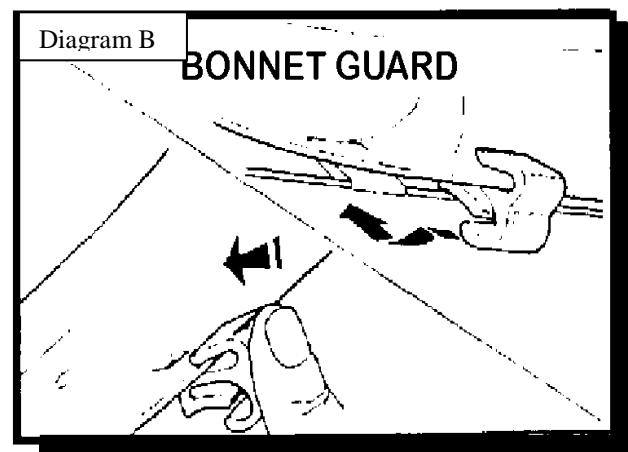

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.