


AIRPLEX INDUSTRIES LTD 21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand PO Box 11286, Ellerslie, Auckland 1542 New Zealand PH +64 (9) 276-9826 Fax +64 (9) 276-9836 <u>info@airplex.co.nz</u> www.airplex.co.nz

FITTING INSTRUCTIONS FIT1036 PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

Fiat Ducato

P/N BG585DB

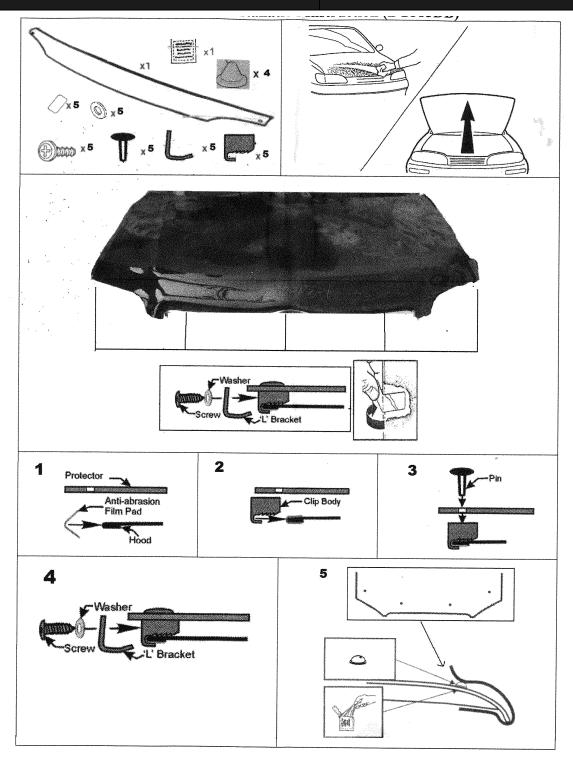

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.

CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT. ASSIST CLOSURE ONLY BY PRESSING ON THE <u>BONNET</u>. NEVER PRESS ON THE BONNET GUARD