



Montaažiskeem / Mounting Instructions / Монтажная схема

Volkswagen Caddy 2010-

Art. 840620


A-raud Ø 60

A-form Ø 60


A-дуга Ø 60



- | | |
|---|----|
| 1. A-raud / A-form / A-дуга | 1 |
| 2. Vinkel / angeled plate / угольник | 2 |
| 3. Kronstein / bracket / кронштейн | 1 |
| 4. Kronstein / bracket / кронштейн | 1 |
| 5. C-profil / C-profile / С-профиль | 4 |
| 6. Kronstein / bracket / кронштейн | 1 |
| 7. Kronstein / bracket / кронштейн | 1 |
| 8. Vinkel / angeled plate / угольник | 1 |
| 9. Polt / bolt / болт M6x20 mm | 2 |
| 10. Polt / bolt / болт M8x25 mm | 2 |
| 11. Polt / bolt / болт M8x35 mm | 4 |
| 12. Polt / bolt / болт M80x110 mm | 2 |
| 13. Polt / bolt / болт M10x30 mm | 4 |
| 14. Mutter / nut / гайка M6 DIN 985 | 2 |
| 15. Mutter / nut / гайка M8 DIN 985 | 8 |
| 16. Seib / washer / шайба 6,4x18x1,6 mm | 4 |
| 17. Seib / washer / шайба 8,4x16x1,6 mm | 10 |
| 18. Seib / washer / шайба 8,4x24x2 mm | 6 |
| 19. Seib / washer / шайба 10,5x30x2,5 mm | 8 |
| 20. Vedruseib / spring washer / пружинная шайба A10 | 4 |

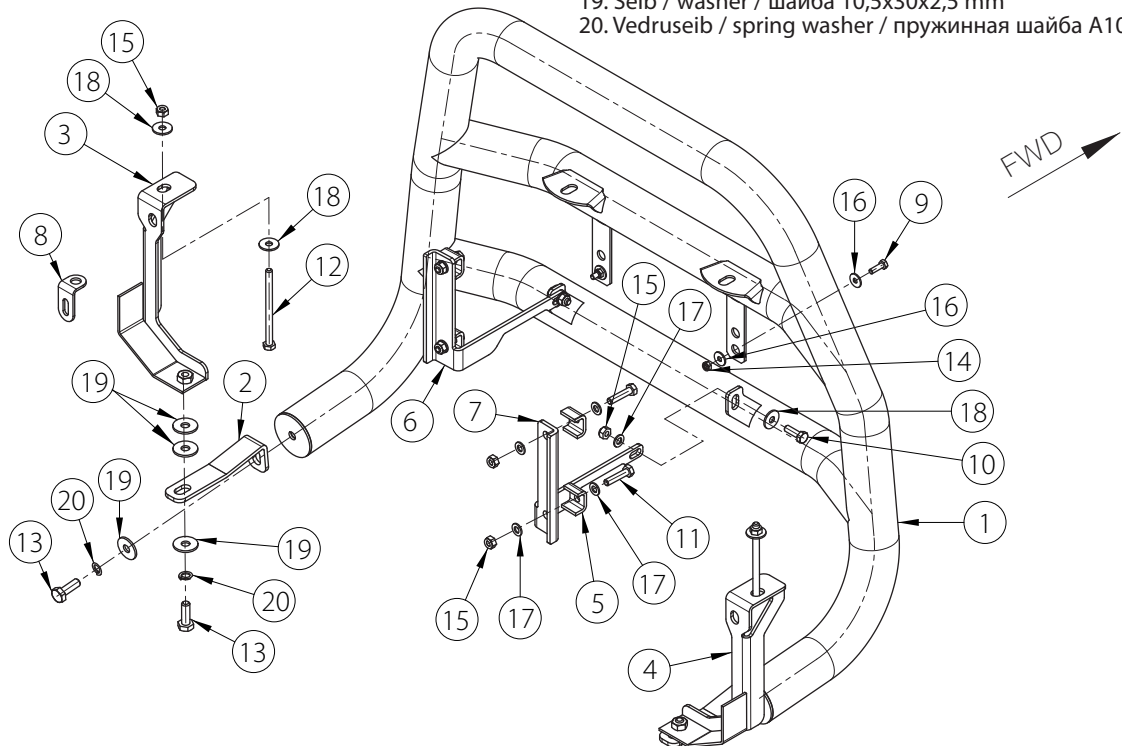

Vajalikud tööriistad / Required Tools / Необходимые инструменты

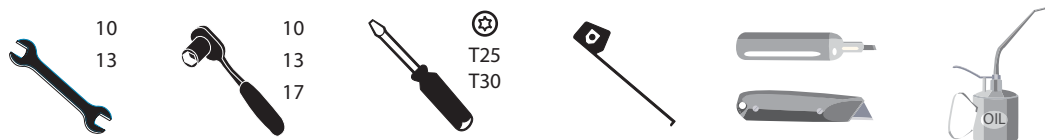

Volkswagen Caddy 2010-


Art. 840620

A-raud Ø 60

A-form Ø 60

А-дуга Ø 60


Paigaldamine / Instructions / Инструкция установки

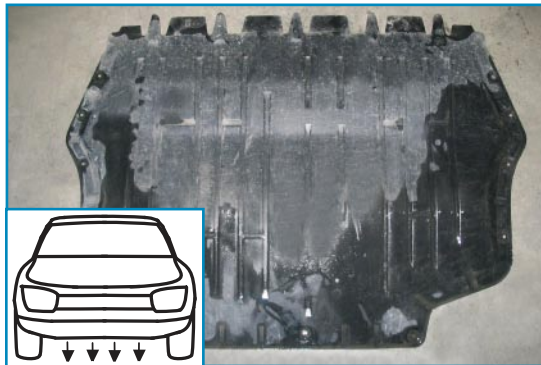

Pilt 1 / Pic. 1 / Рис. 1




Pilt 2 / Pic. 2 / Рис. 2

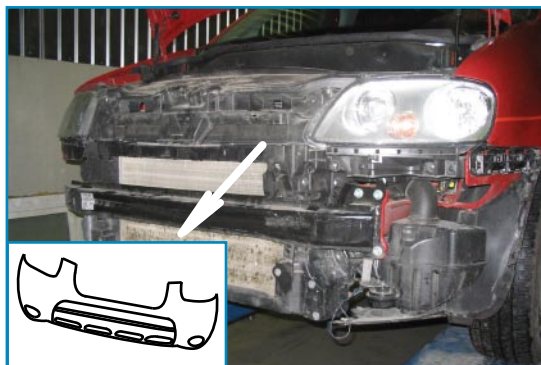

Pilt 3 / Pic. 3 / Рис. 3



Pilt 4 / Pic. 4 / Рис. 4

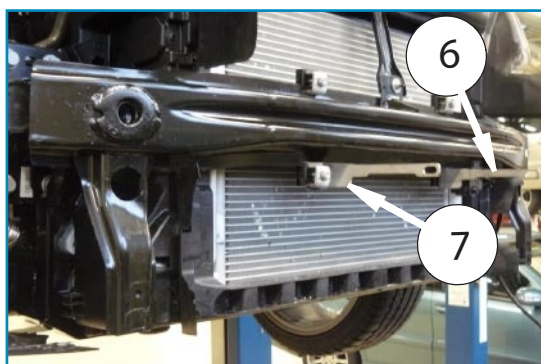

Pilt 5 / Pic. 5 / Рис. 5



Pilt 6 / Pic. 6 / Рис. 6


Volkswagen Caddy 2010-

Art. 840620


A-raud Ø 60

A-form Ø 60


A-дуга Ø 60

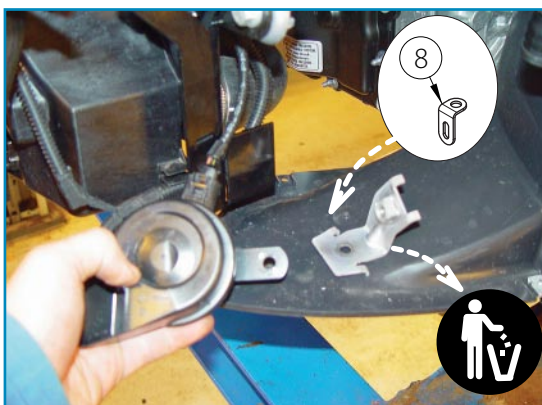

Pilt 7 / Pic. 7 / Рис. 7

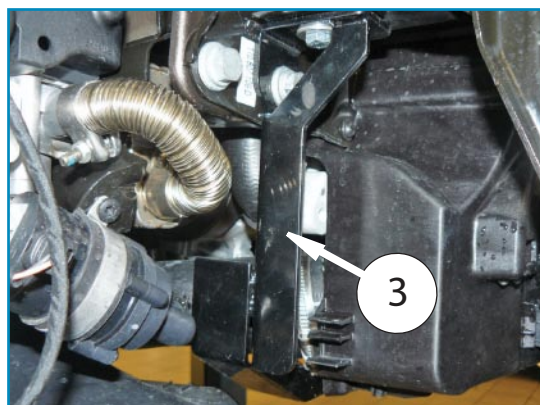

Pilt 8 / Pic. 8 / Рис. 8

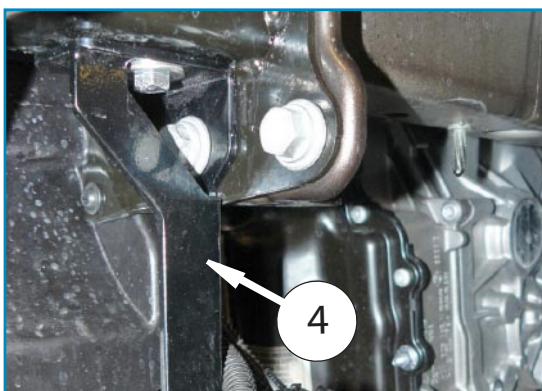

Pilt 9 / Pic. 9 / Рис. 9



Pilt 10 / Pic. 10 / Рис. 10


Volkswagen Caddy 2010-

Art. 840620

A-raud Ø 60

A-form Ø 60

А-дуга Ø 60

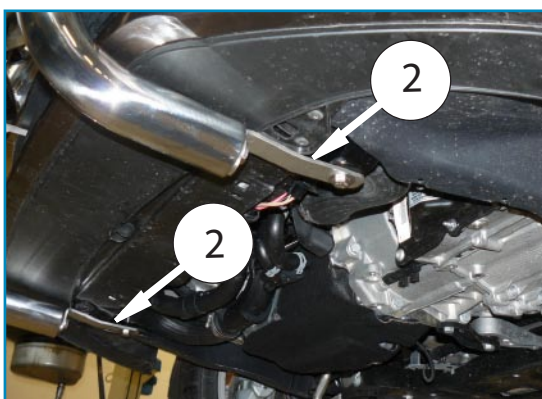

Pilt 11 / Pic. 11 / Рис. 11



Pilt 12 / Pic. 12 / Рис. 12

Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 260x690x850 mm.
- Kaal / Weight / Масса: 11,8 kg.
- Paigaldusaeg / Time of mounting / Время установки: 90 min.
- Tähtsad markeeringud / Important labels / Важные этикетки:



1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества