

## FITTING INSTRUCTIONS FIT1088



PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

# VW CADDY

BG628D

MADE IN NEW ZEALAND

1. Clean and open the Bonnet and position the Bonnet Guard in place ensuring that it is centrally located.
2. Mark position of the 2 predrilled holes in underside of Bonnet Guard.
3. Remove the Bonnet Guard and slide sideways the supplied metal clips into place in marked positions (see diagram here and more photos below).
4. Reposition the Bonnet Guard and fasten to Bonnet with supplied screws.
5. Fit the 4-black plastic "W" clips to the front holes on the Bonnet Guard and apply the anti-abrasive tape to the edge of Bonnet to coincide with the clips as shown. Use the supplied alcohol prep pads to cleanse the area first.
6. "Bump" the plastic "W" clips onto the Bonnet over the anti-abrasive tape.

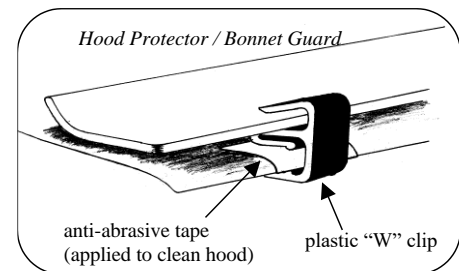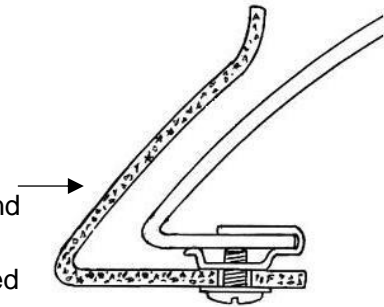

7. THE BONNET PROTECTOR MUST NOT TOUCH THE BONNET WHEN IN USE.



***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET PROTECTOR!***