


Toyota LC 250 24-

Mounting instructions
 Art. 83570270, 83570271
 Nordicbar

English

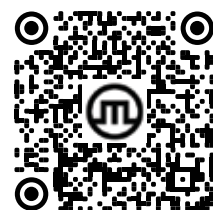


WWW.METEC.EE

Scan the QR code
 for translated
 instructions or visit
metec.ee/instructions



Weight: 12,3 kg
 Time of mounting w/o wiring: 60 min

Required tools:




A2 / A4

M4	-	2 Nm
M6	-	7 Nm
M8	-	17 Nm

Toyota LC 250 24-

Art. 83570270, 83570271

Nordicbar

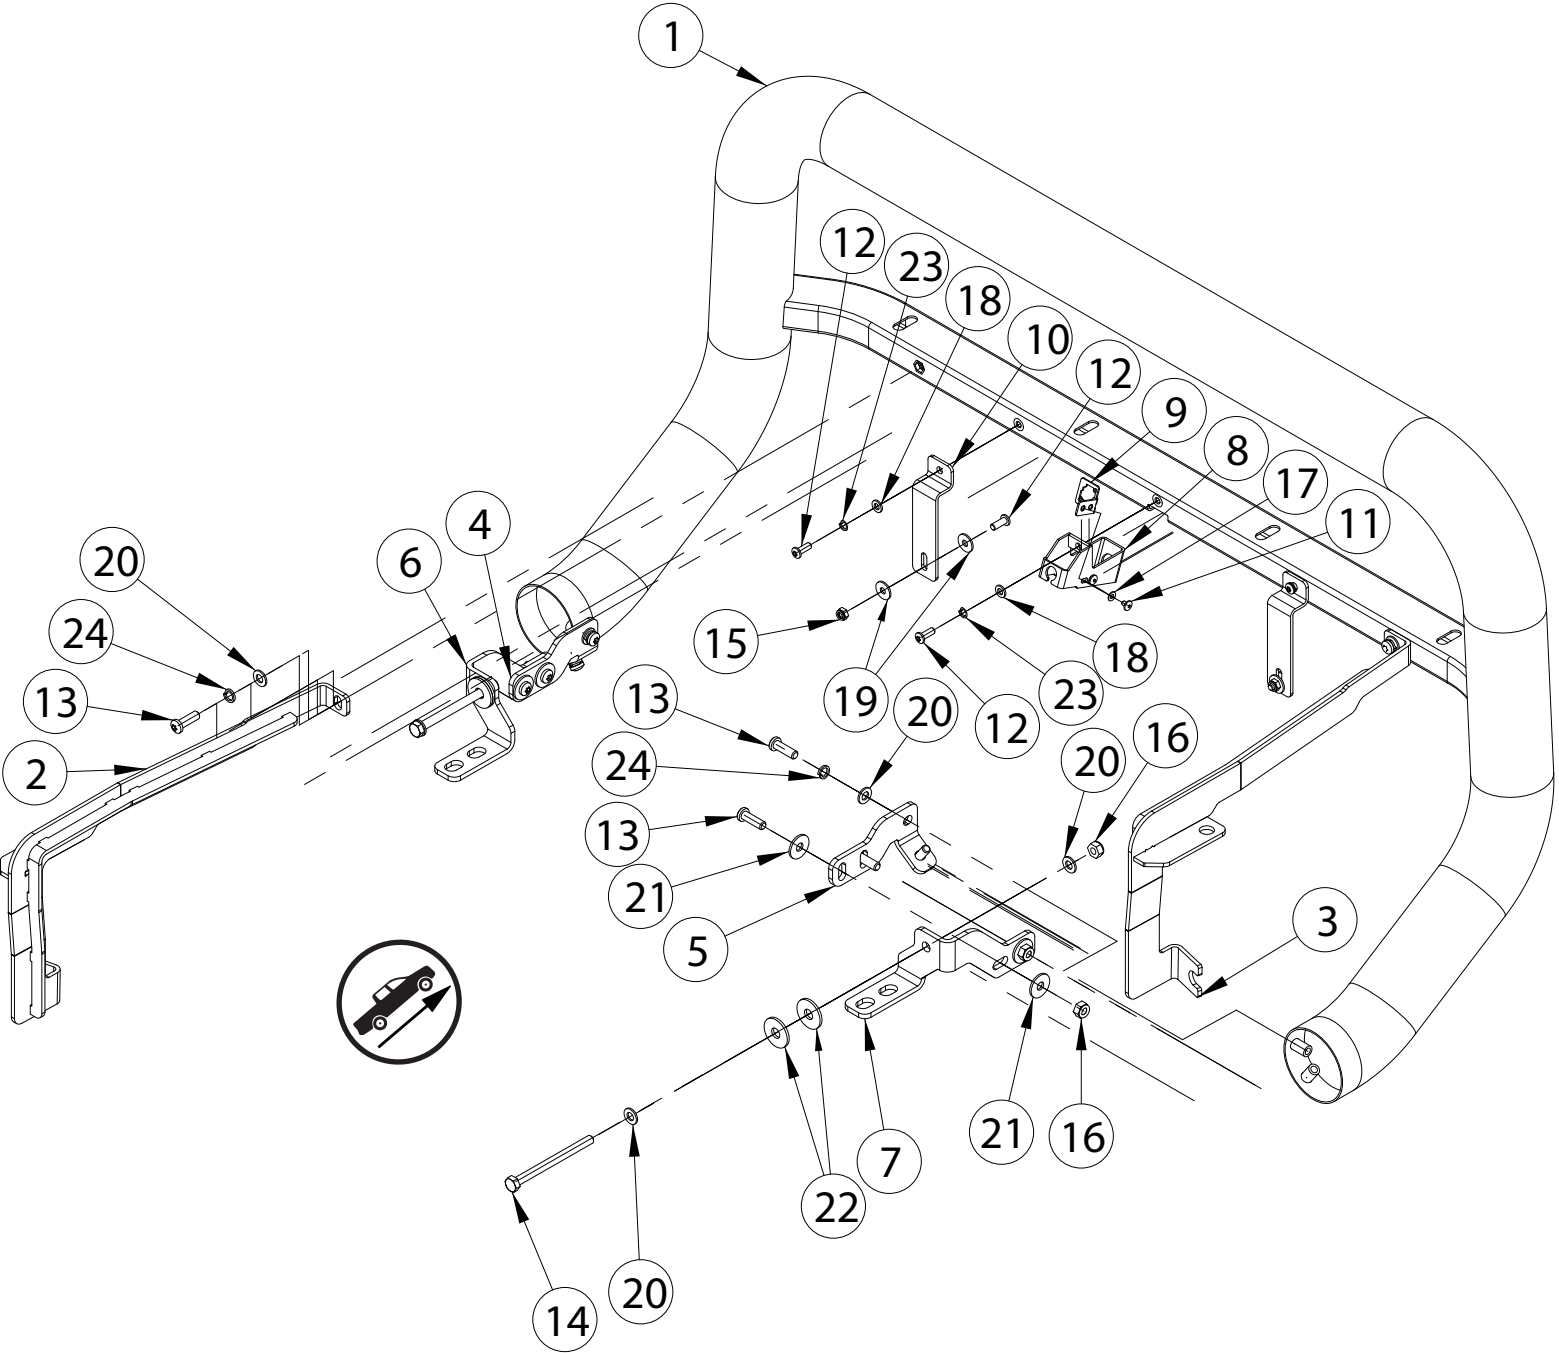

Pos	Description	QTY
1.	Tube	1
2.	Bracket	1
3.	Bracket	1
4.	Bracket	1
5.	Bracket	1
6.	Bracket	1
7.	Bracket	1
8.	Bracket	1
9.	Clamp	1
10.	License plate holder	2

Pos	Description	QTY
11.	Bolt M4x6 DIN7380-A2	2
12.	Bolt M6x16 DIN7380-A2	5
13.	Bolt M8x25 DIN7380-A2	10
14.	Bolt M8x100 DIN931-A2	2
15.	Nut M6 DIN985-A2	2
16.	Nut M8 DIN985-A2	6
17.	Flat Washer 4,3x9x0,8	2
18.	Flat Washer 6,4x12x1,6	2
19.	Flat Washer 6,4x18x1,6	4
20.	Flat Washer 8,4x16x1,6	10

Pos	Description	QTY
21.	Flat Washer 8,4x24x2	8
22.	Flat Washer 10,5x30x2,5	4
23.	Spring washer A6	3
24.	Spring washer A8	6






NB!











To prevent cold welding, use cold weld grease or engine oil



Installation of the lights must be carried out by a qualified electrician only

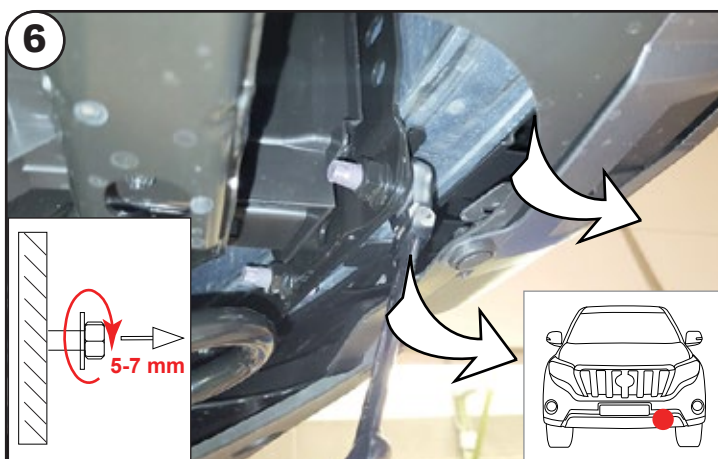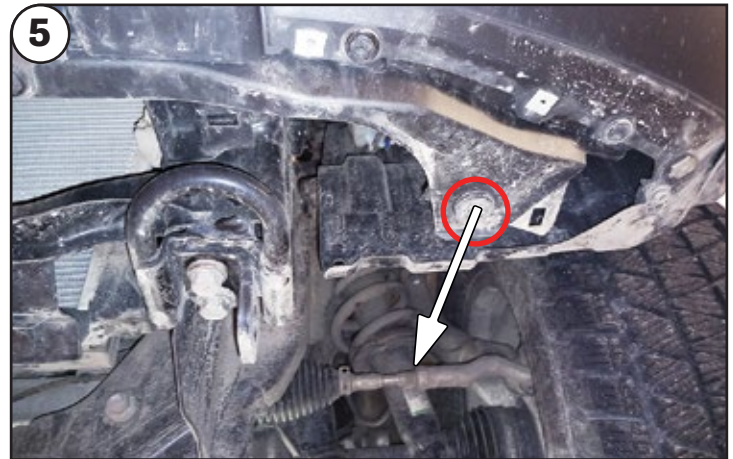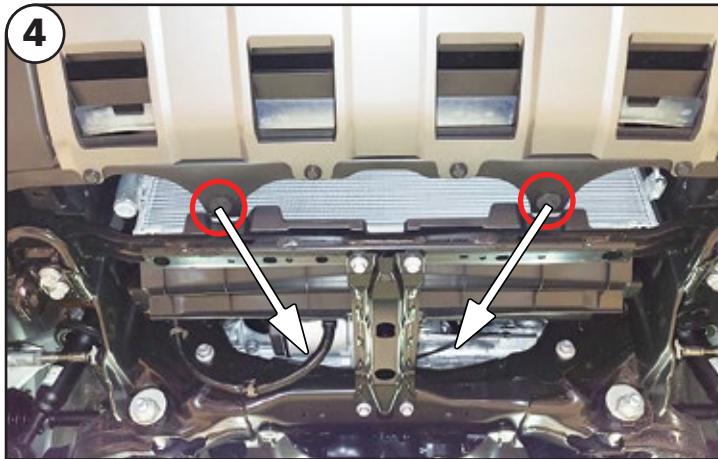
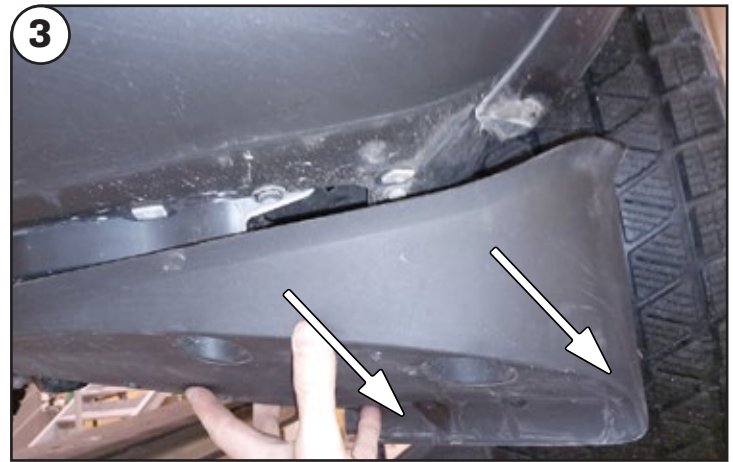
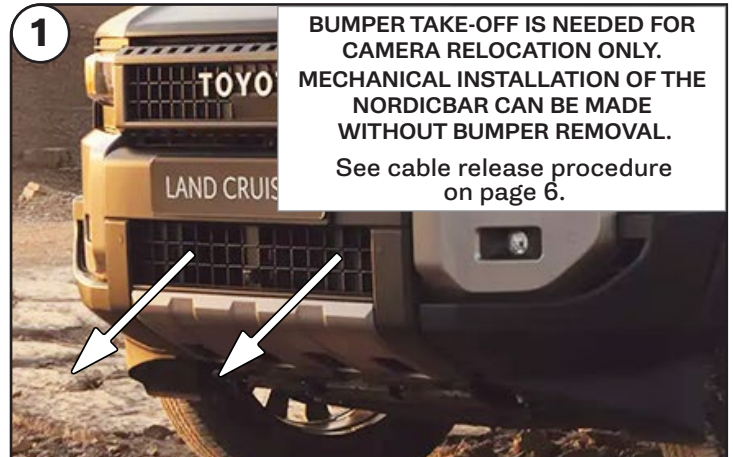


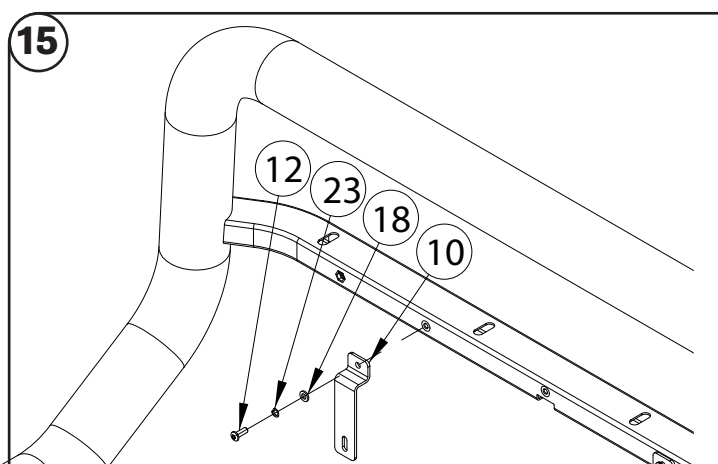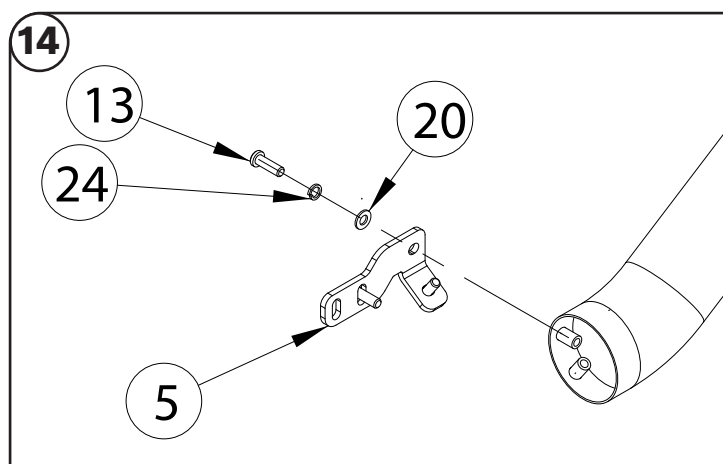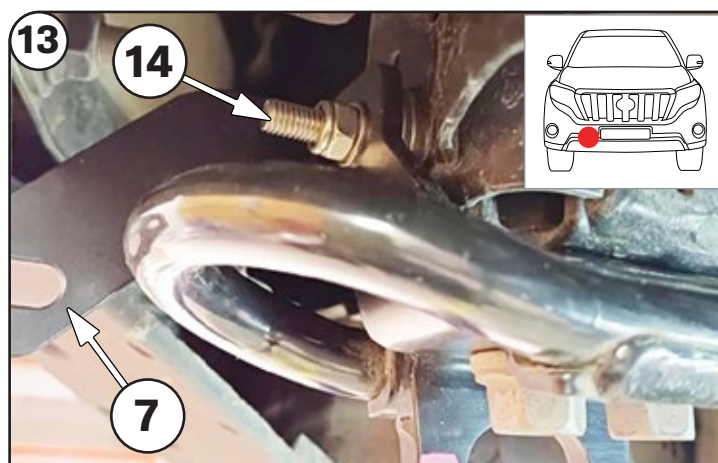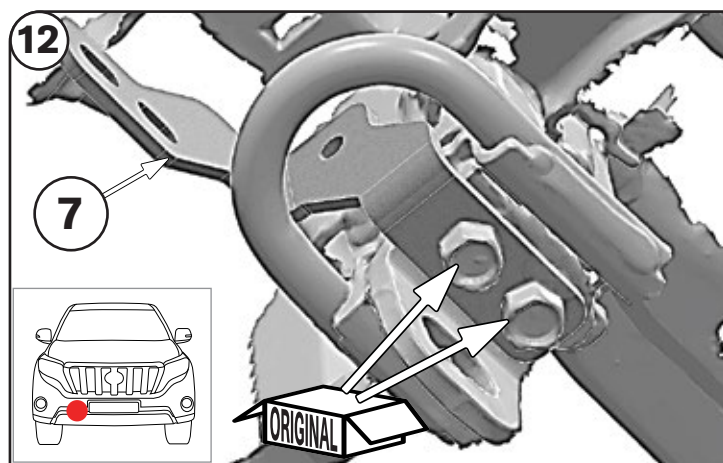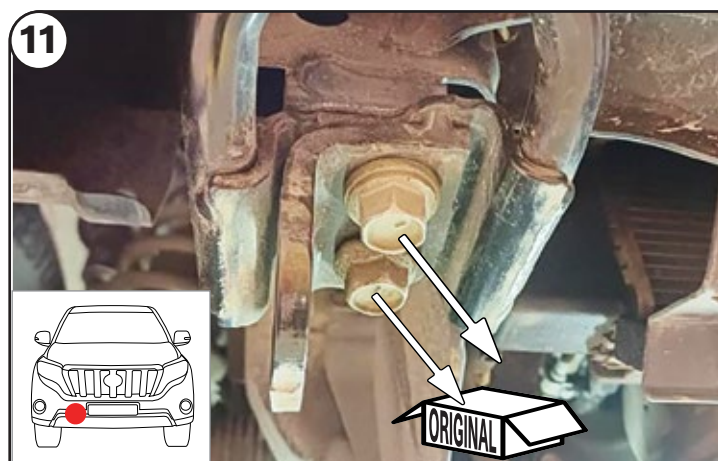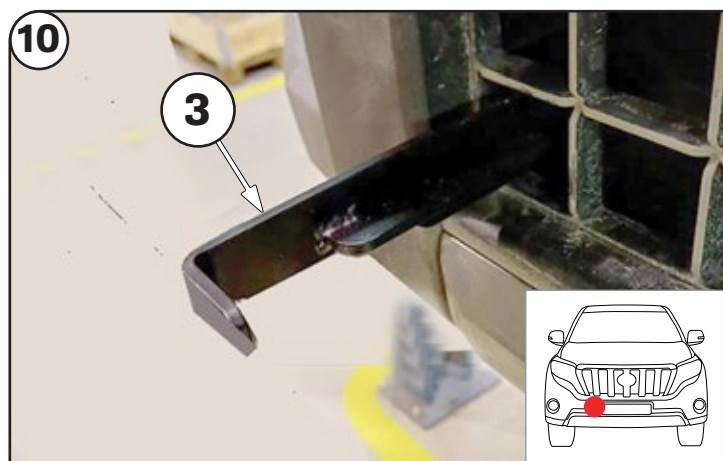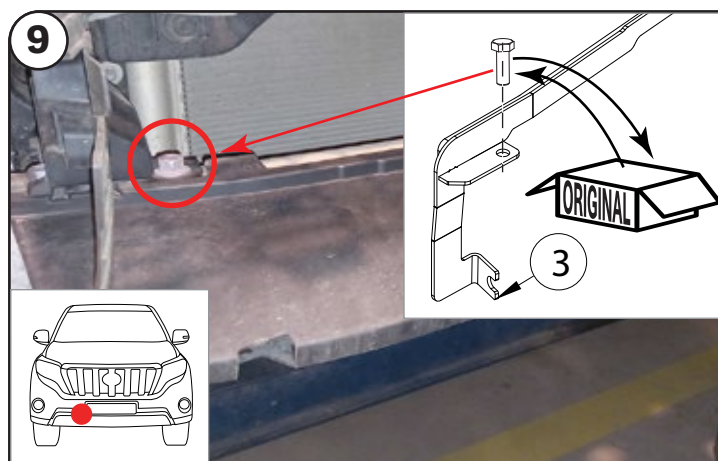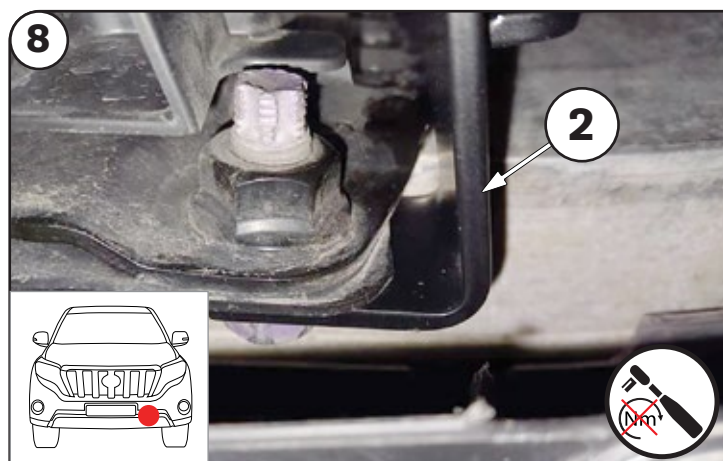

Toyota LC 250 24-

Art. 83570270, 83570271

Nordicbar

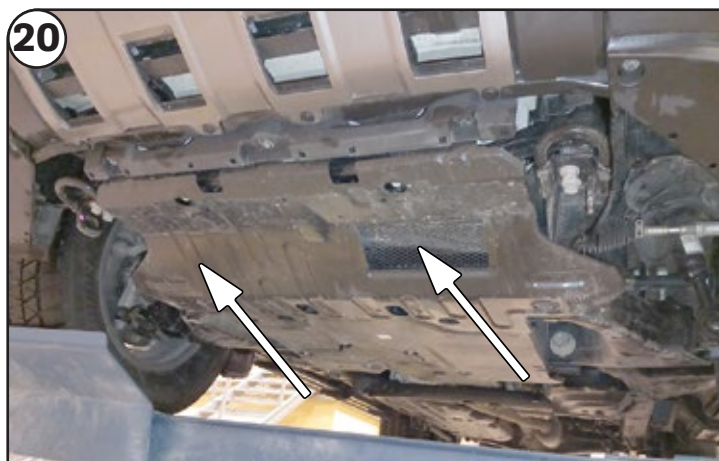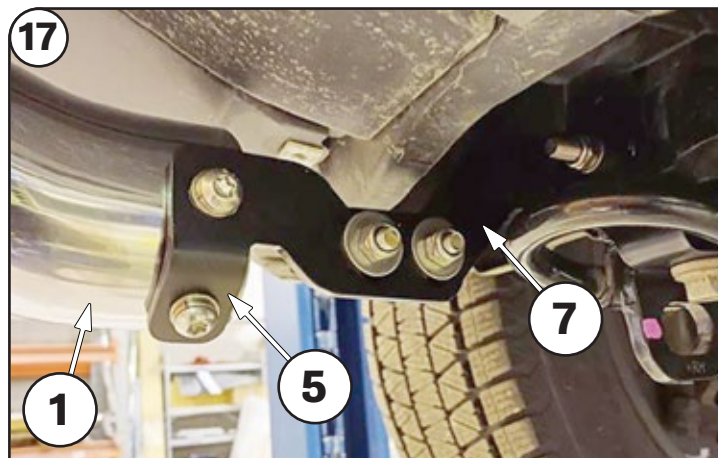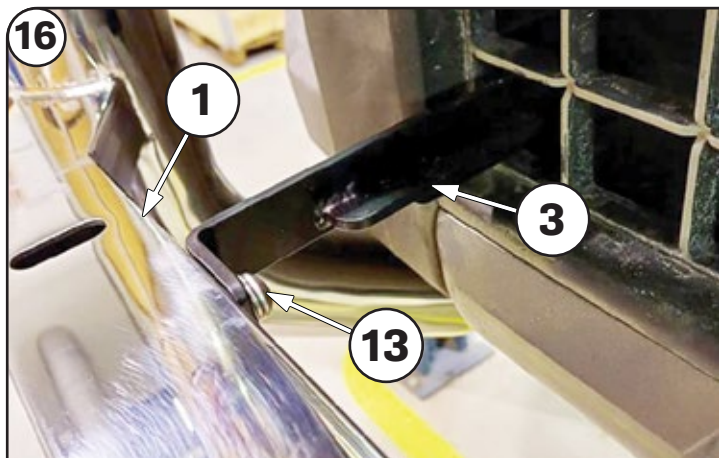

Check and retighten the fasteners:
Road vehicles: every 10 000km
Heavy machinery: every 500 work hours



Clean the product twice a month to remove dirt, salt, and debris that may cause surface discoloration or rust spots

