

FITTING INSTRUCTIONS FIT1240


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD VW GOLF MK8


BG653D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Test Bonnet Guard on the bonnet and note 4 holes in bonnet that correspond with 4 pre-drilled holes in Bonnet Guard.
3. Fit Bonnet Guard in position, fasten securely with supplied plastic base and steel screw.

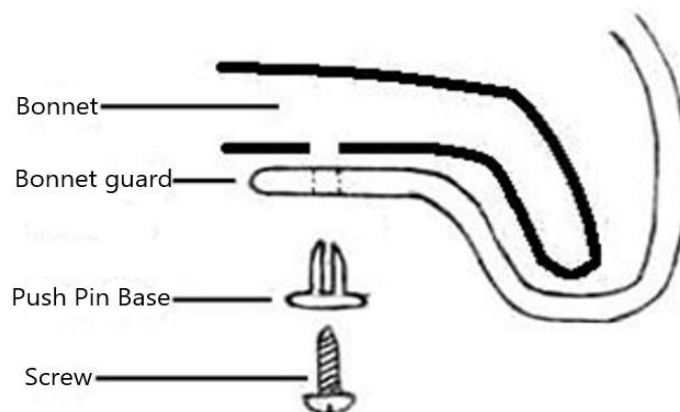

4. Fit the plastic "W" clips to the 2 holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

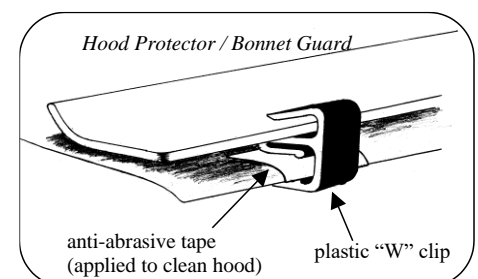

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.