

Ford Transit 19- H2

Mounting instructions
Art. 80733870, 80733871
Lamp holder for working lights

English



WWW.METEC.EE

Scan the QR code
for translated
instructions or visit
metec.ee/instructions



Weight: 9,0 kg
Time of mounting w/o wiring: 60 min

Required tools:




| |
|-------------------|
| A2 / A4 |
| M8 - 17 Nm |

Ford Transit 19- H2

Art. 80733870, 80733871

Lamp holder for working lights

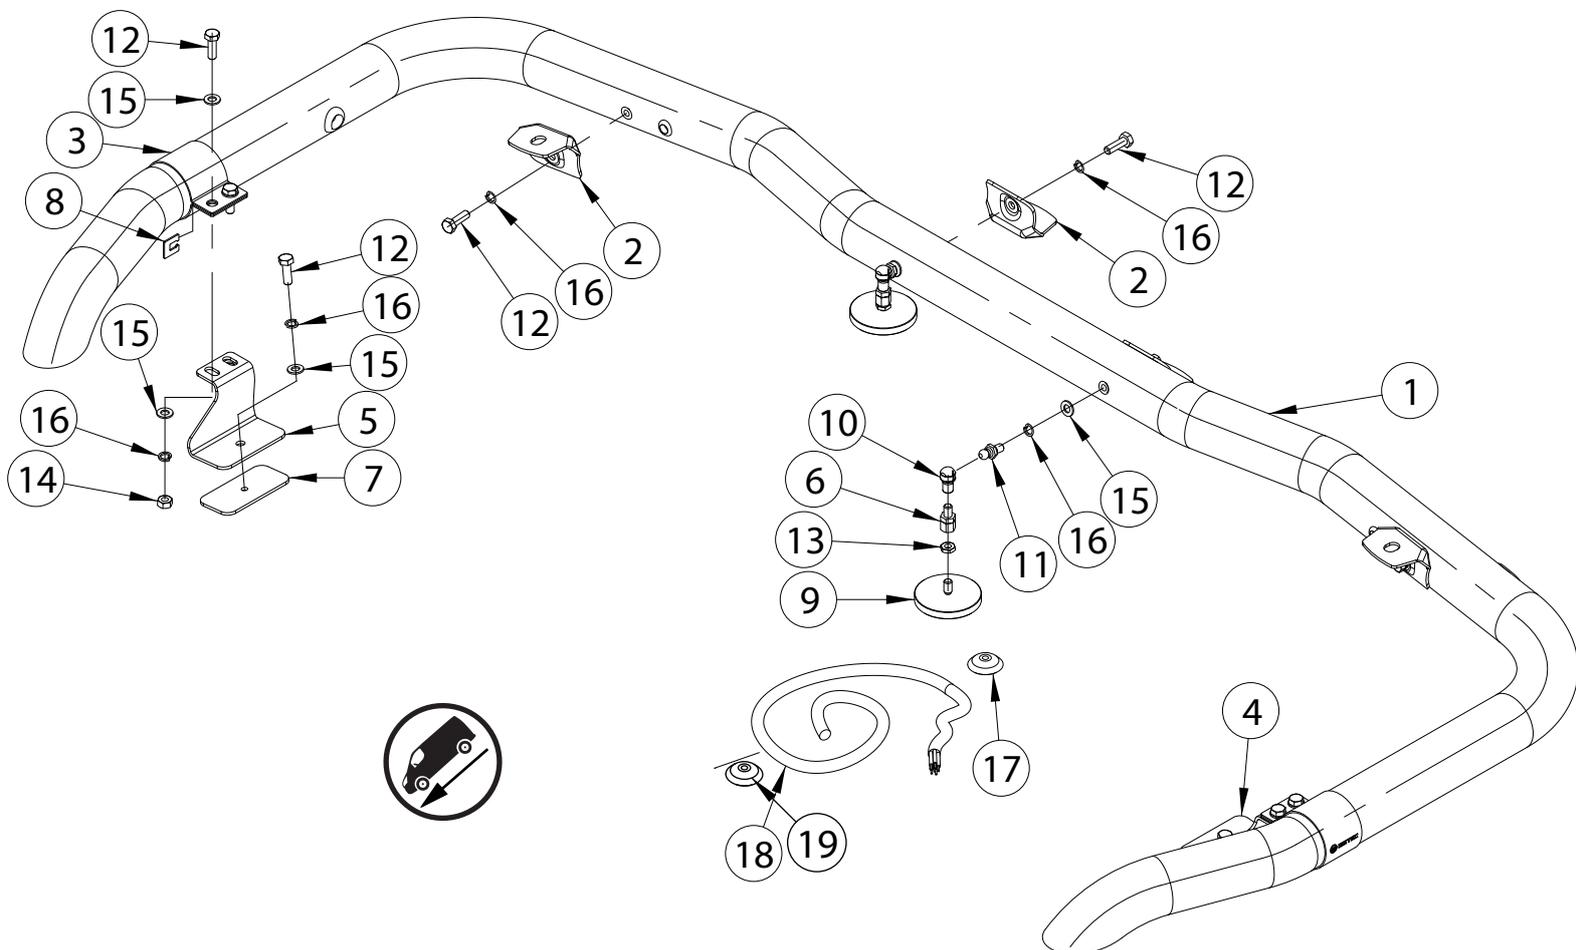

| Pos | Description | QTY | Pos | Description | QTY |
|-----|----------------------------|-----|-----|------------------------|-----|
| 1. | Tube | 1 | 11. | Socket joint | 2 |
| 2. | Lamp fixing bracket | 4 | 12. | Bolt M8x25 DIN933-A2 | 10 |
| 3. | Clamp | 2 | 13. | Nut M8 DIN439-A2 | 2 |
| 4. | Bracket | 1 | 14. | Nut M8 DIN934-A2 | 4 |
| 5. | Bracket | 1 | 15. | Flat Washer 8,4x16x1,6 | 12 |
| 6. | Adapter M8 | 2 | 16. | Spring washer A8 | 12 |
| 7. | Rubber washer | 2 | 17. | Grommet | 1 |
| 8. | Brace-it installation tool | 2 | 18. | Wiring harness | 1 |
| 9. | Magnetic fastening d=66 | 2 | | | |
| 10. | Ball joint | 2 | | | |

Ford Transit 19- H2

Art. 80733870, 80733871

Lamp holder for working lights







NB!



To prevent cold welding, use cold weld grease or engine oil








Installation of the lights must be carried out by a qualified electrician only

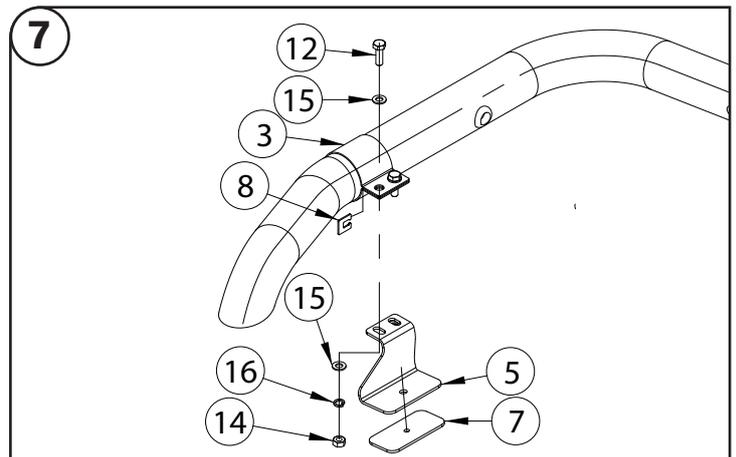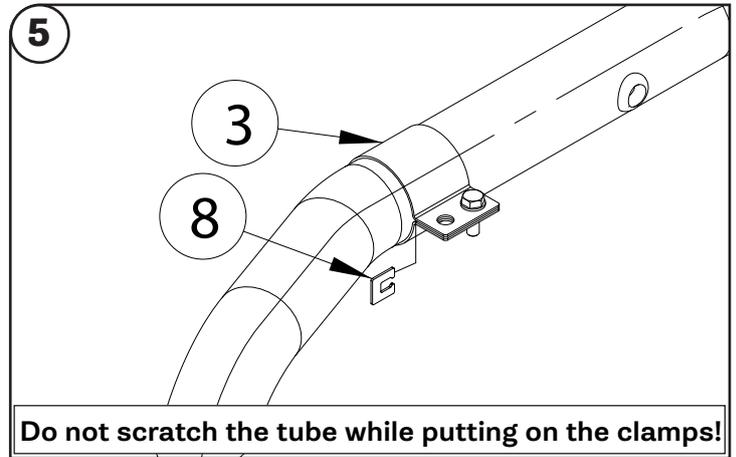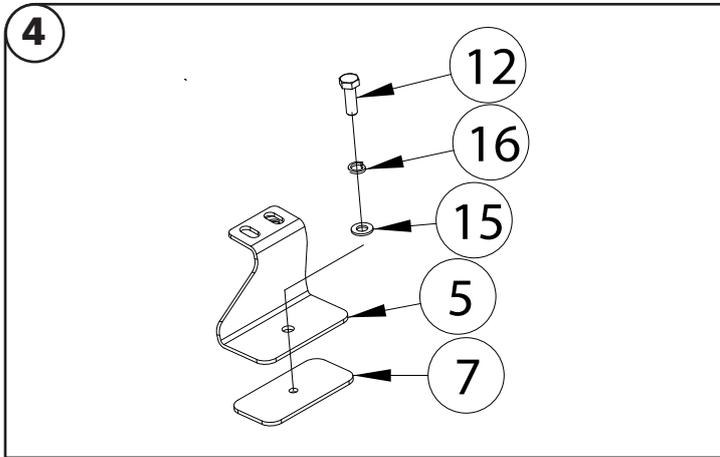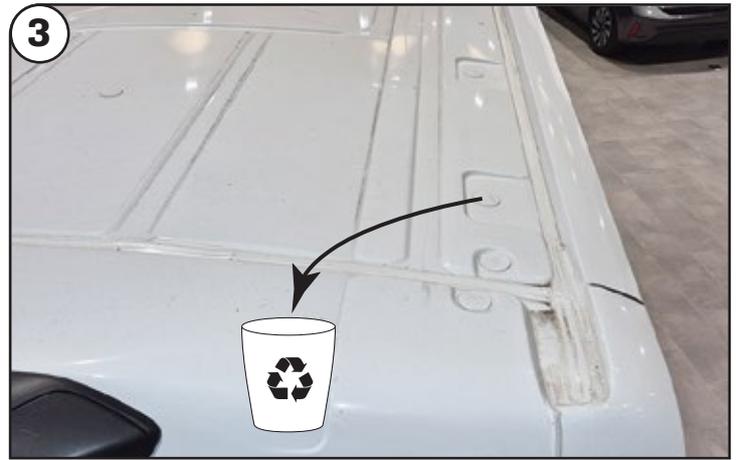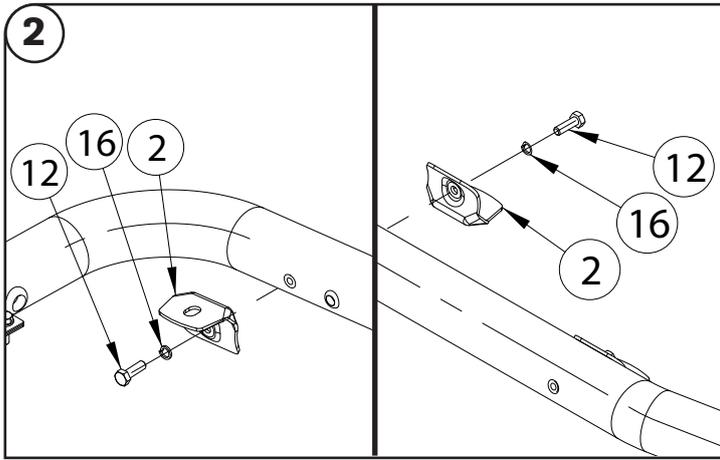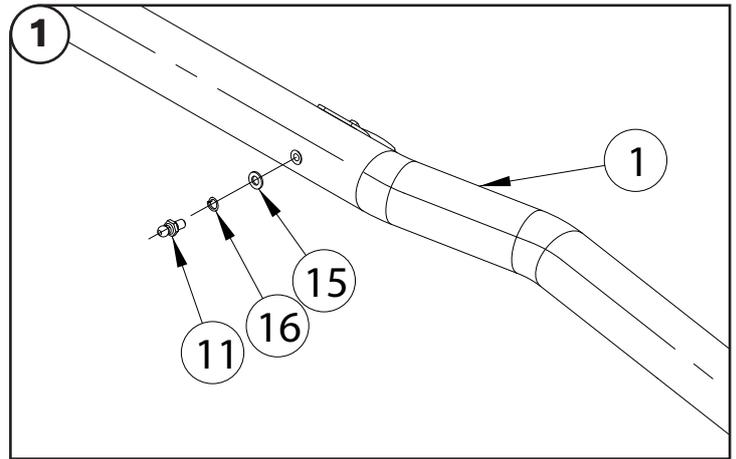

Ford Transit 19- H2

Art. 80733870, 80733871

Lamp holder for working lights

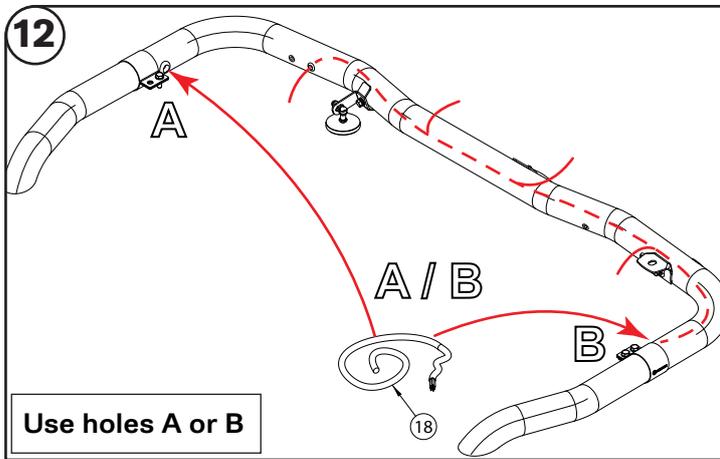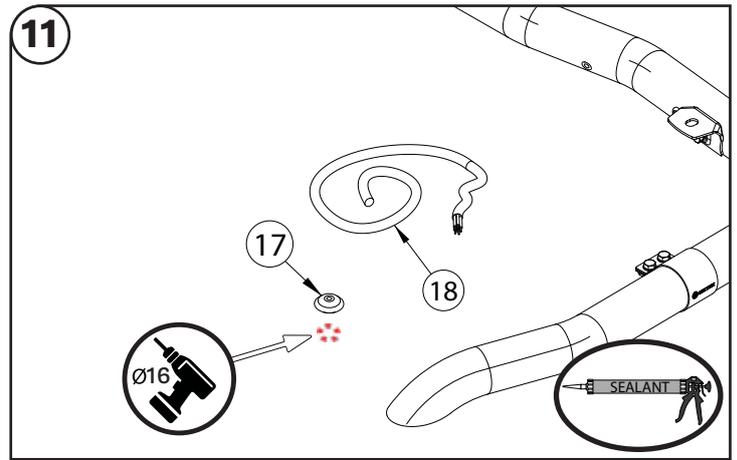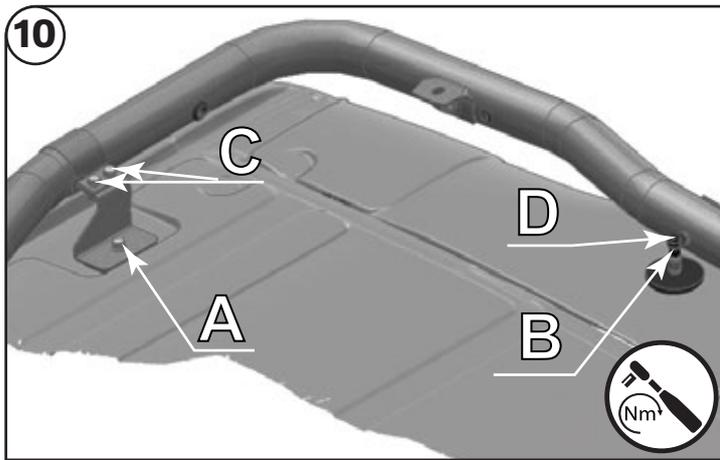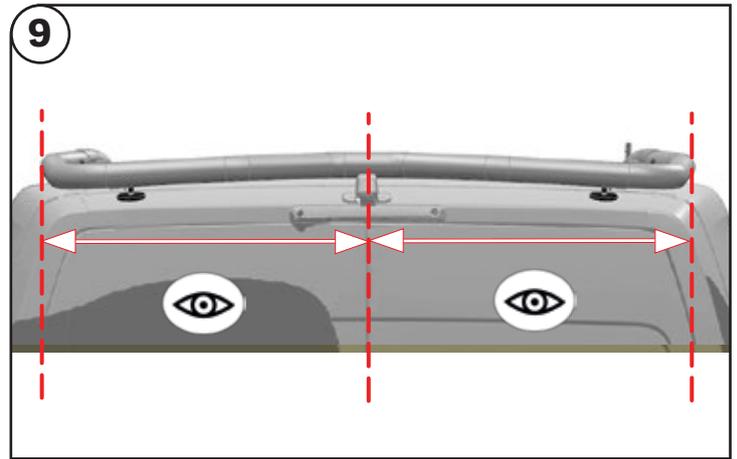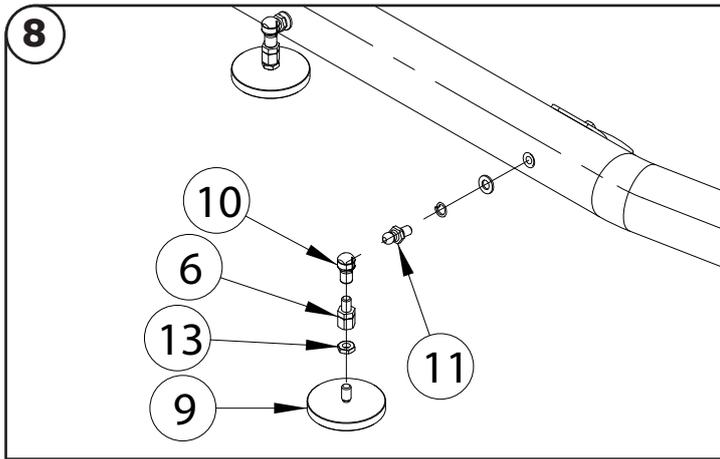

-  Check and retighten the fasteners:
Road vehicles: every 10 000km
Heavy machinery: every 500 work hours
-  Clean the product twice a month to remove dirt, salt, and debris that may cause surface discoloration or rust spots

In case of any defects or damage to the METEC product upon delivery, contact the reseller or point of sale where you made your purchase for resolution